

Mag Sump Sensor

Installation Guide

Notice

Veeder-Root makes no warranty of any kind with regard to this publication, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose.

Veeder-Root shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this publication.

Veeder-Root reserves the right to change system options or features, or the information contained in this publication.

This publication contains proprietary information which is protected by copyright. All rights reserved. No part of this publication may be photocopied, reproduced, or translated to another language without the prior written consent of Veeder-Root.

DAMAGE CLAIMS

1. Thoroughly examine all components and units as soon as they are received. If damaged, write a complete and detailed description of the damage on the face of the freight bill. The carrier's agent *must* verify the inspection and sign the description.
2. Immediately notify the delivering carrier of damage or loss. This notification may be given either in person or by telephone. Written confirmation must be mailed within 48 hours. Railroads and motor carriers are reluctant to make adjustments for damaged merchandise unless inspected and reported promptly.
3. Risk of loss, or damage to merchandise remains with the buyer. It is the buyer's responsibility to file a claim with the carrier involved.

RETURN SHIPPING

For the parts return procedure, please follow the appropriate instructions in the "General Returned Goods Policy" and "Parts Return" pages in the "Policies and Literature" section of the Veeder-Root **North American Environmental Products** price list.

Introduction

Contractor Certification Requirements 1
Related Manuals 1
Safety Precautions 1
Equipment Needed for Installation 2

Installation

Installation Requirements 3
Installation Procedure 3
 Sensor Installation 3
 Sensor Wiring 5
Sensor Setup Notes 5

Figures

Figure 1. Example Dispenser Pan Installation 3
Figure 2. Example Dispenser Containment Sump Installation 4
Figure 3. Example STP Containment Sump Installation 4
Figure 4. Field Wiring Connections (Observe Polarity) 5
Figure 5. Epoxy Sealing Two-Wire Connections 6

Introduction

This manual contains procedures for the installation or replacement of the Veeder-Root Mag Sump Sensor. This manual assumes all preliminary site preparation is completed, and that field wiring from the console to the pan/ sump junction box is in place.

Following sensor installation, you will need to setup the console to monitor the sensor.

Contractor Certification Requirements

Veeder-Root requires the following minimum training certifications for contractors who will install and setup the equipment discussed in this manual:

Level 1 Contractors holding valid Level 1 Certification are approved to perform wiring and conduit routing, equipment mounting, probe and sensor installation, tank and line preparation, and line leak detector installation.

Level 2/3 Contractors holding valid Level 2 or 3 Certifications are approved to perform installation checkout, startup, programming and operations training, troubleshooting and servicing for all Veeder-Root Tank Monitoring Systems, including Line Leak Detection and associated accessories.

Warranty Registrations may only be submitted by selected distributors.







Related Manuals

576013-879 TLS-3XX Site Prep and Installation Manual

576013-623 TLS-3XX System Setup Manual

Safety Precautions

The following safety symbols are used throughout this manual to alert you to important safety hazards and precautions.

 <p>EXPLOSIVE Fuels and their vapors are extremely explosive if ignited.</p>	 <p>FLAMMABLE Fuels and their vapors are extremely flammable.</p>
 <p>ELECTRICITY High voltage exists in, and is supplied to, the device. A potential shock hazard exists.</p>	 <p>TURN POWER OFF Live power to a device creates a potential shock hazard. Turn Off power to the device and associated accessories when servicing the unit.</p>
 <p>WEAR EYE PROTECTION Wear eye protection when working with pressurized fuel lines or epoxy sealant to avoid possible eye injury.</p>	 <p>GLOVES Wear gloves to protect hands from irritation or injury.</p>

**INJURY**

Careless or improper handling of materials can result in bodily injury.

**READ ALL RELATED MANUALS**

Knowledge of all related procedures before you begin work is important. Read and understand all manuals thoroughly. If you do not understand a procedure, ask someone who does.


WARNING


This product is to be installed in systems operating near locations where highly combustible fuels or vapors may be present.

Fire or explosion resulting in serious injury or death could result if the equipment is improperly installed or modified. Serious contamination of the environment may also occur.

1. Read and follow all instructions in this manual, including all safety warnings.
2. Comply with all applicable codes including: the National Electrical Code; federal, state, and local codes; and other applicable safety codes.
3. Substitution of components may impair intrinsic safety.
4. Do not use this component for other systems aside from the TLS Console. Install only as described in this manual or you will void all warranties connected with this product.

Equipment Needed for Installation

1. Mag Sump Sensor (available in one of two lengths):
 - 1-foot measurement range, 20-inch overall length- Part No. 857080-101 (gasoline) or -111 (diesel)
 - 2-foot measurement range, 32-inch overall length - Part No. 857080-102 (gasoline) or -112 (diesel)
2. Cable - 10 feet - Part No. 330272-002
3. Cable Seal Kit - Part No. 330020-067
4. Optional - Universal Sensor Mounting kit - Part No. 330020-012.

Installation

Installation Requirements

1. The sensor must rest in the lowest point of the pan or sump and completely compress the position indicator or you will have a 'Sensor Out' alarm (see example illustrations).
2. The sensor should be mounted in a true vertical position to ensure proper operation of the sensor.
3. The sensor should be mounted such that you can pull the sensor straight out of the pan/sump if service is required.

Installation Procedure

IMPORTANT! Do not install the sensor if there is any liquid in the pan or sump. Failure to comply can result in equipment damage or undetected potential environmental and health hazards.



1. Turn OFF power to the TLS Console.
2. Make sure no liquid exists in the pan/sump.
3. Remove Mag Sump Sensor from its shipping box. Hold the sensor flat (horizontally), and remove the insert from the outer tube of the sensor. **NOTE!** failure to remove the insert will result in an alarm condition following the setup procedure.

Sensor Installation

Figure 1 through Figure 3 show sensor installation examples using rigid conduit to the console. However, direct burial cable could be used from the junction box to the console. Also, the examples make use of the optional universal sensor mounting kit.

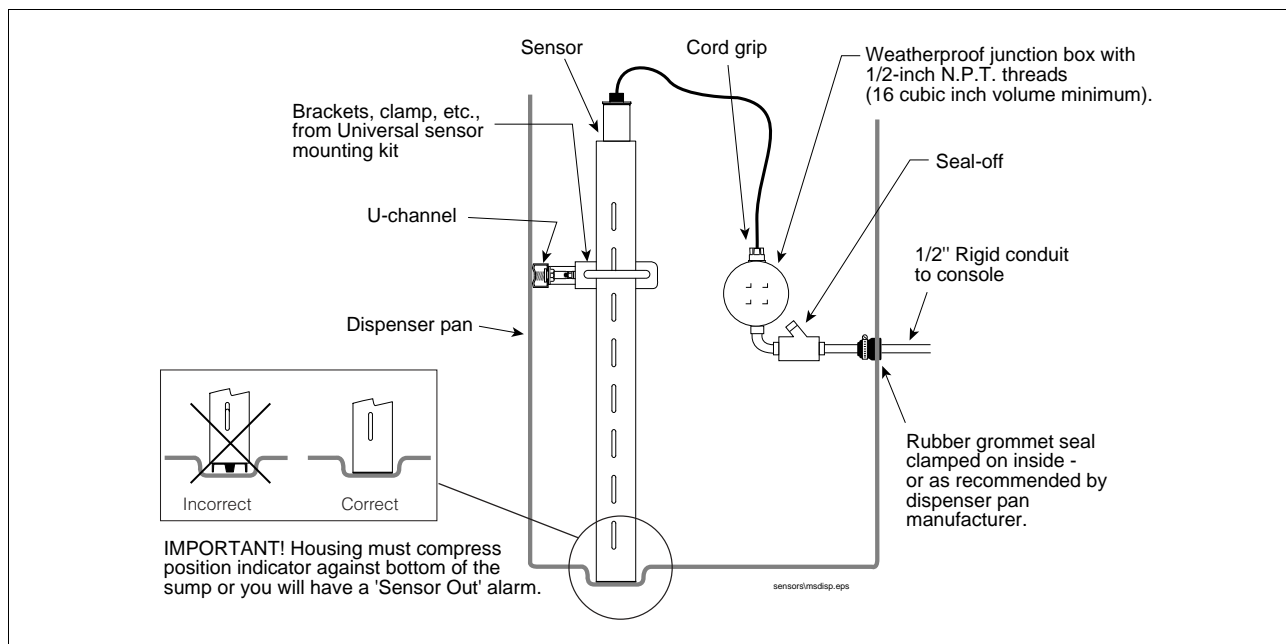


Figure 1. Example Dispenser Pan Installation

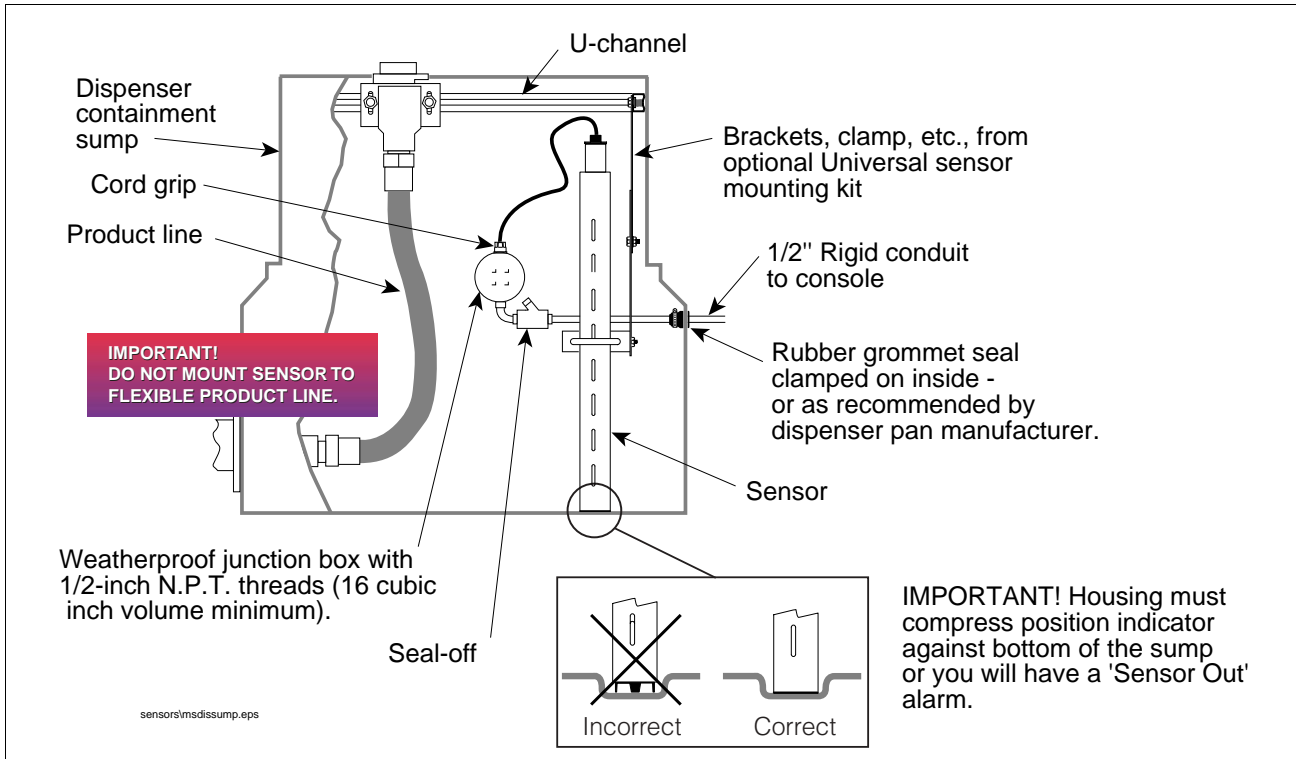


Figure 2. Example Dispenser Containment Sump Installation

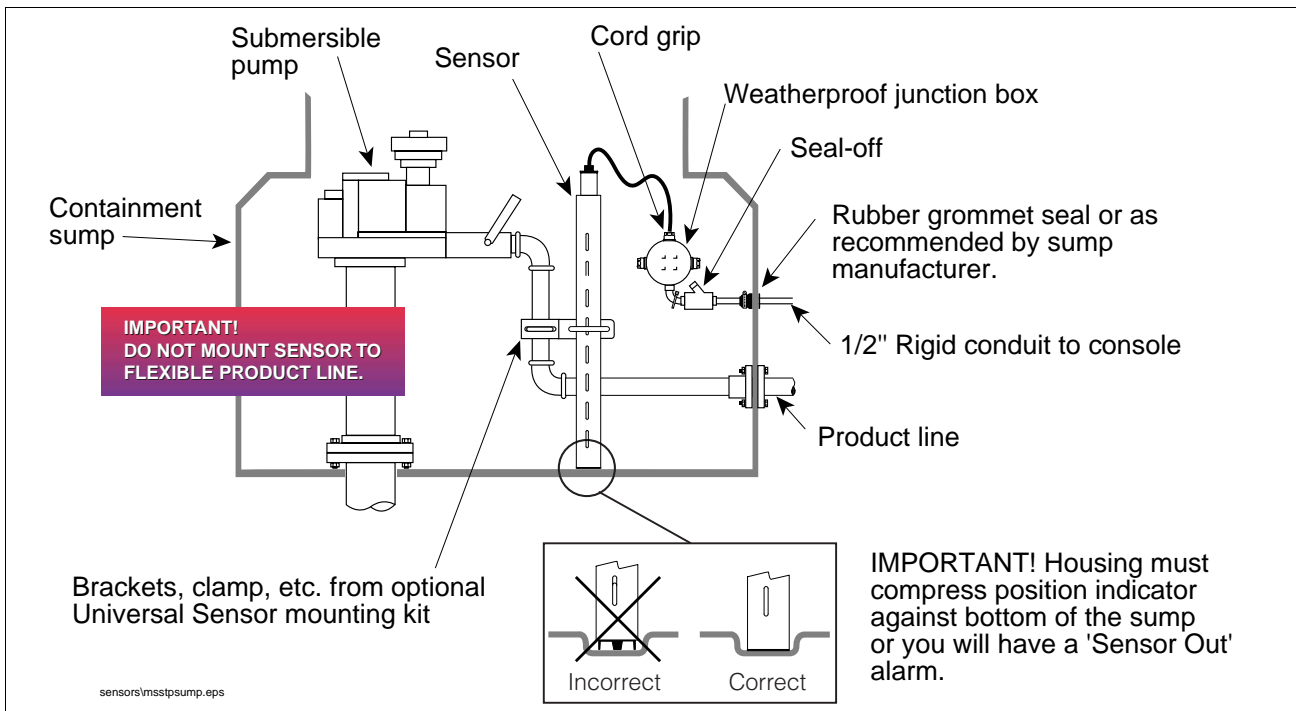


Figure 3. Example STP Containment Sump Installation

Sensor Wiring

1. Firmly hold the top of the sensor, and attach the sensor cable connector into the receptacle in the top of the sensor. Be sure the connector is attached securely by tightening the locking nut.
2. Install the cord grip supplied with the cable seal kit in the pan/sump junction box in which the field wiring from the console terminates.
3. Coil up the excess cable and tie wrap it out of the way. Feed the two-lead end of the sensor cable through the cord grip in the junction box. Tighten the cord grip nut to ensure a watertight seal at the cable entry.
4. Using wire nuts, connect the two-wire cable to the field wires from the console as shown in Figure 4.

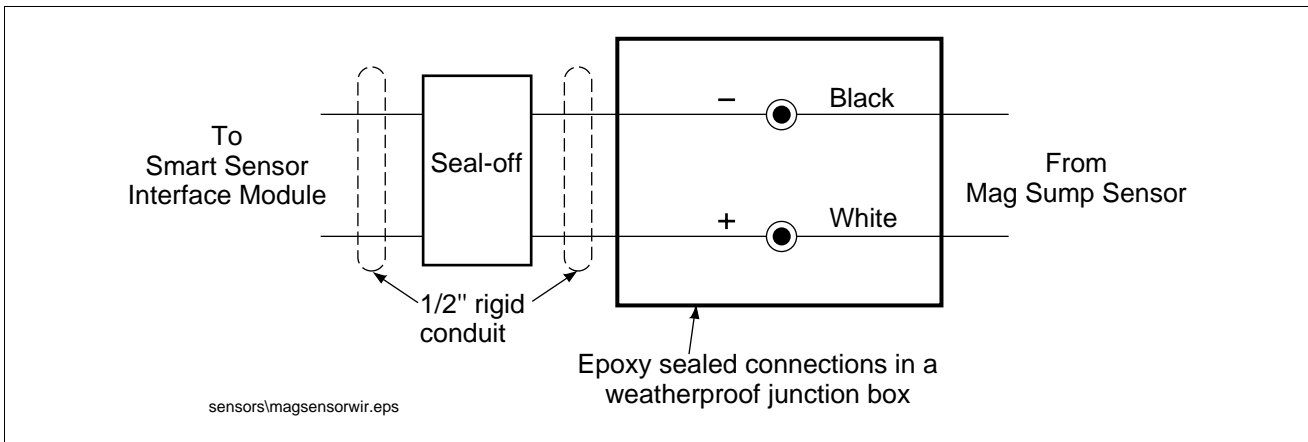


Figure 4. Field Wiring Connections (Observe Polarity)

5. Seal wire nuts with epoxy sealant following the instructions in Figure 5.



CAUTION: Epoxy sealant is irritating to eyes, respiratory system, and skin. Can cause allergic skin reaction. **Contains:** epoxy resin and Cycloaliphatic epoxy-carboxylate. **Precautions:** Wear suitable protective clothing, gloves, eye, and face protection. Use only in well ventilated areas. Wash thoroughly before eating, drinking, or smoking.

6. Push the epoxy sealed bag into the junction box. Replace and tighten the junction box cover.

Sensor Setup Notes

Setting up the console to monitor the Mag Sump Sensor is done in the **Setup Mode** under the **Mag Sensor** function.

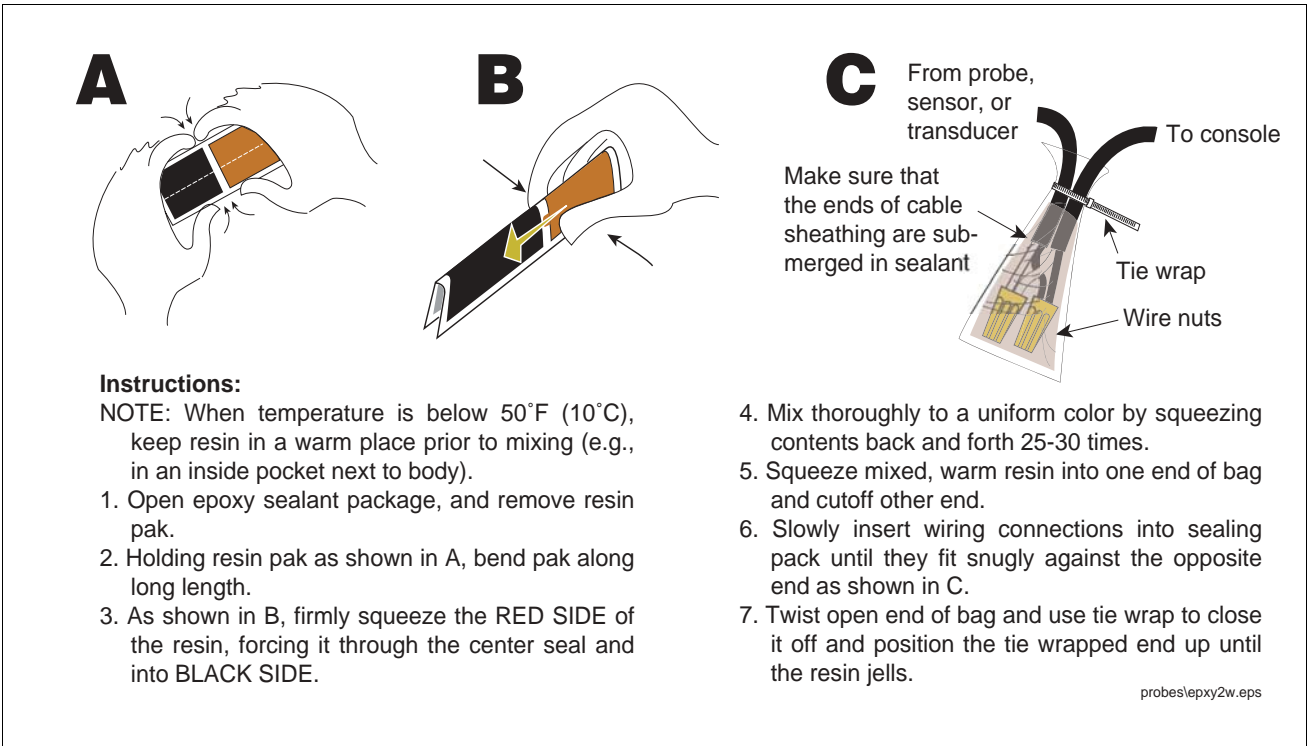


Figure 5. Epoxy Sealing Two-Wire Connections

Veeder-Root has sales offices around the world to serve you.

Headquarters

125 Powder Forest Drive
Simsbury, CT 06070-7684
Tel: (860) 651-2700
Fax: (860) 651-2719
Email: marketing@veeder.com

Australia

Level 1 - 441 South Road
Moorabbin 3189 Victoria
Tel: +61 3 9556 5435
Fax: +61 3 9556 5482
Email: rxdupuy@veeder-australia.com

Brazil

Rua ado Benatti, 92
Sao Paulo - SP 05037-904
Tel: +55 (0) 11 3611 2155
Fax: +55 (0) 11 3611 1982
Email: clopez@veeder.com

Canada

Eastern Canada
Tel: (519) 925-9899
Western Canada
Tel: (604) 576-4469
Email: marketing@veeder.com

China

Room 2202, Scitech Tower
No. 22 Jian Guomen
Wai DaJie
Beijing 100004
Tel: +86 10 6512 8081
Fax: +86 10 6522 0887
Email: lu ying@veeder.com

England

Hydrex House, Garden Road
Richmond, Surrey TW9 4NR
Tel: +44 (0) 20 8392 1355
Fax: +44 (0) 20 8878 6642
Email: sales@veeder.co.uk

France

94-106 Rue Blaise Pascal
93600 Aulnay Sous Bois
Tel: +33 (0) 1 4879 5599
Fax: +33 (0) 1 4868 3900
Email: sales@veeder.co.uk

Germany

Uhlandstrabe 49
78554 Aldingen
Tel: +49 (0) 7424 1400
Fax: +49 (0) 7424 1410
Email: sales@veeder.co.uk

Mexico

Sagitario #4529-3
Col. La Calma C.P. 45070
Zapopan, Jalisco
Tel: (523) 632 3482
Fax: (523) 133 3219
Email: jmartinez@veeder.com

Poland

01-517 Warszawa ul. Mickiewicza 18/12
Tel/Fax: +48 (0) 22 839 08 47
Email: sales@veeder.co.uk

Singapore

246 MacPherson Road
#08-01 Betime Building
348578
Tel: +65 (0) 6745 9265
Fax: +65 (0) 6745 1791
Email: francis yap@veeder.com

